



Teacup low (fits 101X)
3PLW037X 7½oz 21cl



Tea saucer
3PLW101X



Teacup stacking (fits 100A)
3PLW001U 6¼oz 18cl
3PLW002U 8oz 23cl



Tea saucer
3PLW100A



Café au lait cup
3PLW099X 11oz 31cl (fits 101X & 145X)
3PLW076X 15oz 42cl (fits 145X)
3PLW097X 20oz 57cl (fits 144X)



Café au lait saucer
3PLW145X 6¾" 16.4cm



Café au lait saucer
3PLW144X 7" 17.8cm



After dinner cup (fits 129X)
3PLW060X 3½oz 9.5cl
3PLW067X 5oz 14cl



After dinner saucer
3PLW129X



After dinner cup stacking (fits 121X)
3PLW050U 3½oz 10cl
3PLW051U 4½oz 13cl



After dinner saucer
3PLW121X



Beaker
3PLW084X 8oz 24cl (fits 100A & 101X)
3PLW075X 10oz 28cl (fits 100A & 101X)
3PLW077X 12oz 34cl
3PLW085X 16oz 45cl



Mug
3PLW091V 10oz 28cl
3PLW090V 12oz 34cl
3PLW092V 16oz 45cl



Beaker stacking (fits 100A & 101X)
3PLW090X 9½oz 27cl



Beaker stacking (fits 100A & 101X)
3PLW073X 11½oz 32cl



Pizza plate
3PLW291X 12¼" 31.1cm



Plate
3PLW210C 6³/₈" 16.2cm
3PLW220C 7" 18cm
3PLW230C 8" 20.5cm
3PLW240C 9" 23cm



Plate
3PLW250C 9¹/₂" 24cm
3PLW260C 10" 25.4cm
3PLW270C 10³/₈" 27cm
3PLW280C 11¹/₂" 29cm
3PLW290C 12¹/₂" 31.8cm



Plate (mid rim)
3PLW211X2 6³/₈" 16.2cm
3PLW232X2 8" 20.5cm
3PLW270C 10³/₈" 27cm
3PLW247X2 9" 23cm
3PLW264X2 9⁷/₈" 25.1cm



Plate (mid rim)
3PLW282X2 11" 28cm
3PLW295X2 12" 30.5cm



Service plate
3PLW290X 12¹/₂" 31.8cm



Oval platter (rimless)
3PLW400A 8⁷/₈" 22.5cm
3PLW420A 10¹/₂" 26.7cm
3PLW430A 11¹/₂" 29cm
3PLW440A 12¹/₂" 31.8cm



Oval platter
3PLW450A 15" 38.1cm



Soup plate
3PLW360E 8" 20.3cm 17oz 48cl



Soup plate
3PLW360C 8¹/₂" 21.6cm
3PLW370C 9¹/₂" 24cm



Soup/pasta plate
3PLW380X 11³/₈" 29cm
3PLW385X 12¹/₄" 31.1cm



**Soup cup stacking (handled)
(fits 100A)**
3PLW530U 9¹/₂oz 27cl



Soup bowl
3PLW591X 11oz 31cl



Bowl stacking (unhandled)
3PLW598X 12oz 34cl



Bowl
3PLW390X 12" 30.5cm 63¹/₂oz 180cl



Bowl
3PLW512X 3⁵/₈" 9.4cm 7¹/₂oz 21cl
3PLW599X 4¹/₄" 11cm 11oz 31cl
3PLW526X 4³/₄" 12cm 15oz 42cl
3PLW597X 5¹/₈" 13.1cm 20oz 57cl



Chefs' bowl
3PLW553X 3" 7.6cm 1³/₄oz 4.9cl
3PLW554X 4" 10.2cm 4¹/₄oz 12.5cl
3PLW555X 5" 12.7cm 8³/₄oz 25cl
3PLW583X 6¹/₂" 16.5cm 19oz 53.9cl



Chefs' bowl
3PLW595X 8" 20.3cm 38¹/₂oz 109.2cl
3PLW565X 10¹/₂" 26.7cm 63¹/₄oz 180cl
3PLW564X 12¹/₂" 31.8cm 102³/₄oz 290cl



Round footed bowl
3PLW590X 4¹/₂" 11.5cm 9¹/₂oz 27cl
3PLW596X 6¹/₄" 15.9cm 23oz 65cl
3PLW976X 8¹/₄" 21cm 50oz 140cl



Oatmeal
3PLW337X 6¹/₂" 16.5cm 16¹/₄oz 46.1cl



Oatmeal (rimmed)
3PLW336X 6³/₄" 17.2cm 15oz 42.5cl



Fruit
3PLW300A 4⁷/₈" 12.4cm 5³/₄oz 16.5cl



Fruit
3PLW310A 5³/₈" 13.7cm 7³/₄oz 22cl



Fruit
3PLW300V 4⁵/₈" 11.7cm 4¹/₄oz 12cl



Dipper
3PLW742X 2⁵/₈" 6cm 1³/₄oz 4.8cl
3PLW744X 3¹/₄" 8.1cm 3³/₄oz 11.2cl
3PLW746X 3¹/₂" 9cm 5¹/₂oz 16.3cl



Teapot
3PLW645A 13¹/₂oz 38cl
3PLW650A 21oz 60cl



Coffee pot
3PLW665A 21oz 60cl



Jug
3PLW615A 5¹/₄oz 15cl
3PLW625A 9oz 25cl



Creamer
3PLW600A 2oz 6cl



Beverage pot
3PLW645V 13¹/₂oz 38cl
3PLW650V 23oz 65cl
3PLW655V 35¹/₄oz 100cl



Jug
3PLW615V 5¹/₄oz 15cl
3PLW625V 9oz 25cl
3PLW635V 21oz 60cl



Creamer (unhandled)
3PLW600U2 1oz 3cl



Bouillon/sugar
3PLW500A 8¹/₂oz 24.4cl



Packet sugar container
3PLW813X 3¾" x 2⅞" 9.5cm x 7.3cm



Salt
3PLW706X
Pepper
3PLW707X



Salt
3PLW792X
Pepper
3PLW793X



Bud vase
3PLW714X



Oval eared fish dish
3PLW432X 11½" 29.2cm



Round eared dish
3PLW753X 5¼" 13.3cm



Ramekin
3PLW751X 3" 7.6cm 4¼oz 12cl



Sauce dish
3PLW811X 3¼" 8.3cm 2¼oz 6.4cl



Nut dish
3PLW768X 3¾" 9.5cm 4¾oz 13.7cl



Butter pot
3PLW735X 2⅞" 6cm



Butter dish/coaster
3PLW737X 4¼" 10.8cm



Egg cup stacking
3PLW740X



Sauceboat
3PLW801X 3oz 9cl
3PLW804X 6oz 17cl
3PLW806X 10oz 28cl

